



## 6" Long Fence Rods, pair

---

### Installation

Loosen the fence locking knobs and remove the fence. Loosen the fence rods with a 1/4" wrench, then unscrew and remove the fence rods. Mount the long fence rods into place and snug with wrench. Replace the fence, then retighten the fence knobs.